

		U1005			U1007		U1008		U10
		参数	F20.3	F17.3	F17.3	F20.3	F17.3	F20.3	F15.3
1	参数复位	00-02	10	10	10	10	10	10	10
2	最高转数	00-06	2000	2000	2000	2000	2000	2000	2000
3	最高压力	00-07	140						
4	速度频宽	00-10	25						
5	最低压力百分比	00-16	3						
6	最低流量百分比	00-19	3						
7	电机额定电压	01-04	364	336	341	341	370	370	360
8	电机额定电流	01-17	24	20.4	28.2	36.7	35.1	40.8	41
9	电机额定功率	01-18	12	10	14	18	17.6	20	20
10	电机额定转数	01-19	2000	1700	1700	2000	1700	2000	1500
11	电机惯量	01-21	70	70	90	90	98	98	120
12	电机正反转	01-36	1或0						
13	电机温度模式KTY	02-11	1						
14	传感器回受最小电压	03-11	0.3						
15		01-07	5						
16	运行RUN		RUN						
17	自学习角度	01-07	4						
18	运行RUN		RUN						
19	压力控制模式	00-09	1	1	1	1	1	1	1
20	外部端子控制	01-01	1	1	1	1	1	1	1
双泵合流参数设置		主泵00-09=0 03-13=1 03-14= (从泵排量/主泵)01-01=1 副泵00-09=0 03-13=2 01-01=2							
联动参数设置		03-01=45							

调试参数表

10	U1013			U1320			U1325	U1330			
F18.3	F15.3	F17.3	F20.3	F17.3	F18.3	F20.3	F15.3	F15.3	F17.3	F18.3	F20.3
10	10	10	10	10	10	10	10	10	10	10	10
2000	2000	2000	2000	2000	2000	2000	2000	2000	2000	2000	2000
321	370	380	340	360	360	360	380	380	368	379	386
44	61	55.4	73.7	92.6	94.5	121	100	106	145	146.5	155
23	29	28.7	36.7	39.4	44	56.3	49	60	62	67	81
1800	1500	1700	2000	1700	1800	2000	1500	1500	1700	1800	2000
120	150	150	150	360	360	360	430	490	490	490	490
1	1	1	1	1	1	1	1	1	1	1	1
1	1	1	1	1	1	1	1	1	1	1	1



U1340		
F15.3	F18.3	F20.3
10	10	10
2000	2000	2000
347	379	341
130	196	230
70	91	107
1500	1800	2000
630	630	630
1	1	1
1	1	1